


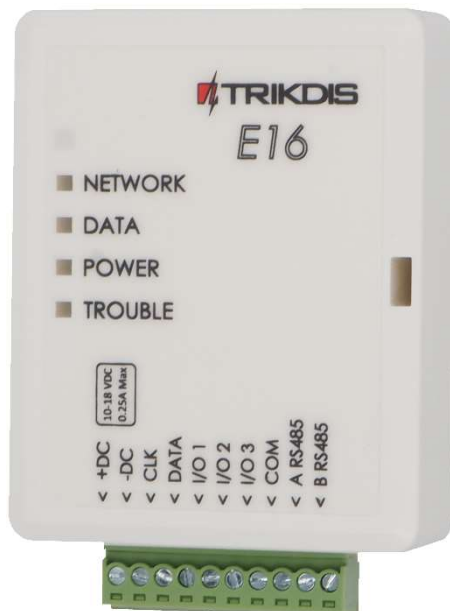

„Ethernet“ communicator E16

Installation manual

March, 2024



Contents

SAFETY REQUIREMENTS.....	3
1 DESCRIPTION	4
1.1 List of compatible control panels	5
1.2 Specifications	5
1.3 Communicator elements.....	6
1.4 Purpose of terminals.....	6
1.5 LED indication of operation.....	6
1.6 Structural schematic with E16 usage.....	7
2 QUICK CONFIGURATION WITH TRIKDISCONFIG SOFTWARE	7
2.1 Settings for connection with Protegus app	8
2.2 Settings for connection with Central Monitoring Station	9
3 INSTALLATION AND WIRING	10
3.1 Schematics for wiring the communicator to a security control panel.....	10
3.2 Schematic for connecting to panel keyswitch zone	11
3.3 Schematics for input connection.....	12
3.4 Connect LAN cable	13
3.5 Schematics for wiring a relay.....	13
3.6 Schematics for connecting iO series expansion modules	13
3.7 Turn on the communicator	13
4 PROGRAMMING THE CONTROL PANEL.....	14
5 REMOTE CONTROL	16
5.1 Adding the security system to Protegus app.....	16
5.2 Additional settings to arm/disarm the system using the control panel’s keyswitch zone	16
5.3 Arming/disarming the alarm system with Protegus.....	18
6 TRIKDISCONFIG WINDOW DESCRIPTION.....	19
6.1 TrikidisConfig status bar description.....	19
6.2 “System settings” window	20
6.3 “CMS reporting” window	21
6.4 “User reporting” window	23
6.5 “Ethernet settings” window.....	23
6.6 “IN/OUT” windows.....	24
6.7 “RS485 modules” window.....	24
6.8 “Event summary” window	26
6.9 Restoring factory settings	27
7 REMOTE CONFIGURATION	27
8 TEST COMMUNICATOR PERFORMANCE	27
9 FIRMWARE UPDATE	28
10 ANNEX	29



Safety requirements

The communicator should be installed and maintained by qualified personnel.

Prior to installation, please read this manual carefully in order to avoid mistakes that can lead to malfunction or even damage to the equipment.

Disconnect the power supply before making any electrical connections.

Changes, modifications or repairs not authorized by the manufacturer shall void your rights under the warranty.



Please act according to your local rules and do not dispose of your unusable alarm system or its components with other household waste.



1 Description

"Ethernet" communicator **E16** directly connects to supported DSC, Paradox, UTC Interlogix (CADDX), Innerrange, Texecom, Honeywell, Crow and Pyronix alarm panels.

Communicator transmits full event information to the Central Monitoring Station.

Communicator also works with **Protegeus** application. With **Protegeus** users can control their alarm system remotely and get notifications about security system events. **Protegeus** app is compatible with all security alarm panels from various manufacturers that are supported by the **E16** communicator. Communicator can transmit event notifications to the Central Monitoring Station and work with **Protegeus** simultaneously.

For panels from other manufacturers use the **E16T** communicator.

Features

Sends events to monitoring station receiver:

- Sends events to TRIKDIS software or hardware receivers that work with any monitoring software.
- Can send event messages to SIA DC-09 receivers.
- Can send event messages to SUR-GARD receivers. The annex has a table for converting Contact ID codes to SIA codes.
- Connection supervision by polling to IP receiver every 30 seconds (or by user defined period).
- Backup channel, that will be used if connection with the primary channel is lost.
- With parallel communication channels events can be sent to two receivers at same time.
- When Protegeus service is enabled, events are first delivered to CMS, and only then are sent to app users.

Works with Protegeus app:

- "Push" and special sound notifications informing about events.
- Remote system Arm/Disarm.
- Remote control of connected devices (lights, gates, ventilation systems, heating, sprinklers, etc.).
- Remote temperature monitoring (with **iO** or **iO-WL** expanders).
- Different user rights for administrator and installer.

Notifies users:


- Users can be notified about events with Protegeus app.

Controllable outputs and inputs:

- 3 double I/O terminals that can be set either as input (IN) or controllable output (OUT) terminals.
- Outputs controlled by the **Protegeus** app.
- Add additional inputs and controllable outputs with wired and wireless **iO** expanders.

Quick setup:

- Settings can be saved to file and quickly written to other communicators.
- Two access levels for configuring the device for CMS administrator and for installer.
- Remote configuration and firmware updates.

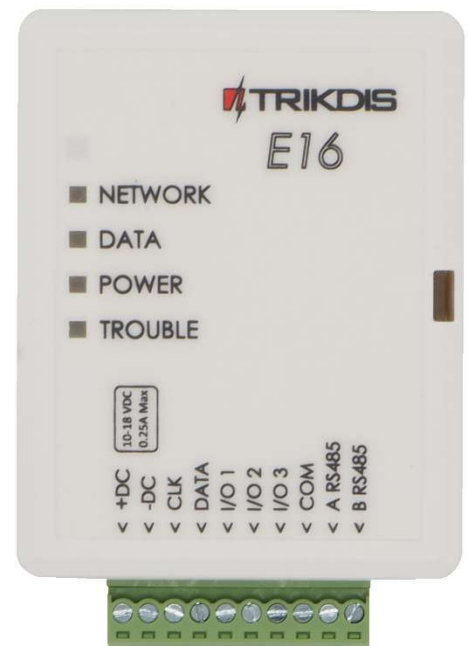



1.1 List of compatible control panels

Manufacturer	Model
DSC®	<u>PC585</u> , <u>PC1404</u> , <u>PC1565</u> , <u>PC1616</u> , <u>PC1832</u> , <u>PC1864</u> , <u>PC5020</u>
PARADOX®	<u>SPECTRA SP4000</u> , <u>SP5500</u> , <u>SP6000</u> , <u>SP7000</u> , <u>SP65</u> , <u>SP5500+</u> , <u>SP6000+</u> , <u>SP7000+</u>
	<u>MAGELLAN MG5000</u> , <u>MG5050</u> , <u>MG5050E</u> , <u>MG5050+</u>
	<u>DIGIPLEX EVO192</u> , <u>EVOHD</u> , <u>NE96</u> , <u>EVO48</u> , <u>EVO96</u>
	<u>SPECTRA 1727</u> , <u>1728</u> , <u>1738</u>
	<u>ESPRIT E55</u> , <u>728ULT</u> , <u>738ULT</u>
UTC Interlogix®	<u>NetworX (Caddx) NX-4v2</u> , <u>NX-6v2</u> , <u>NX-8v2</u> , <u>NX-8E</u>
Texecom®	Premier 412, 816, 832, 832+ <u>Premier 24</u> , <u>48</u> , <u>88</u> , <u>168</u> <u>Premier Elite 12</u> , <u>24</u> , <u>48</u> , <u>64</u> , <u>88</u> , <u>168</u>
Pyronix®	MATRIX 424, MATRIX 832, MATRIX 832+, MATRIX 6, MATRIX 816
Innerrange®	Inception, Integriti
Honeywell®	<u>Ademco Vista-15</u> , <u>Ademco Vista-20</u> , <u>Ademco Vista-48</u>
Crow®	Runner 4/8, Runner 8/16

Underlined - Control panels directly controlled by **E16**. Firmware PARADOX security panels, which are directly controlled, must be V.4 or higher.


*Connect control panels from other manufacturers to the **E16T** communicator.

1.2 Specifications

Parameter	Description
Dual purpose terminals [IN/OUT]	3, can be set as either NC; NO; NC/EOL; NO/EOL; NC/DEOL; NO/DEOL (2,2 kΩ) type inputs or open collector (OC) type outputs with current up to 0,15 A, 30 VDC max. Expandable with iO series expanders.
Power supply voltage	10-18 V DC
Current consumption	100 mA (on standby) Up to 250 mA (while sending data)
Ethernet connection	IEEE802.3, 10 Base-T, RJ45 socket
Transmission protocols	TRK, DC-09_2007, DC-09_2012, TL150
Message encryption	AES 128
Memory	Up to 60 messages
Changing settings	With TrikdisConfig computer program remotely or locally via USB Mini-B port
Operating environment	Temperature from -10 °C to 50 °C, relative humidity - up to 80% at +20 °C
Communicator dimensions	88 x 62 x 26 mm
Weight	80 g



1.3 Communicator elements

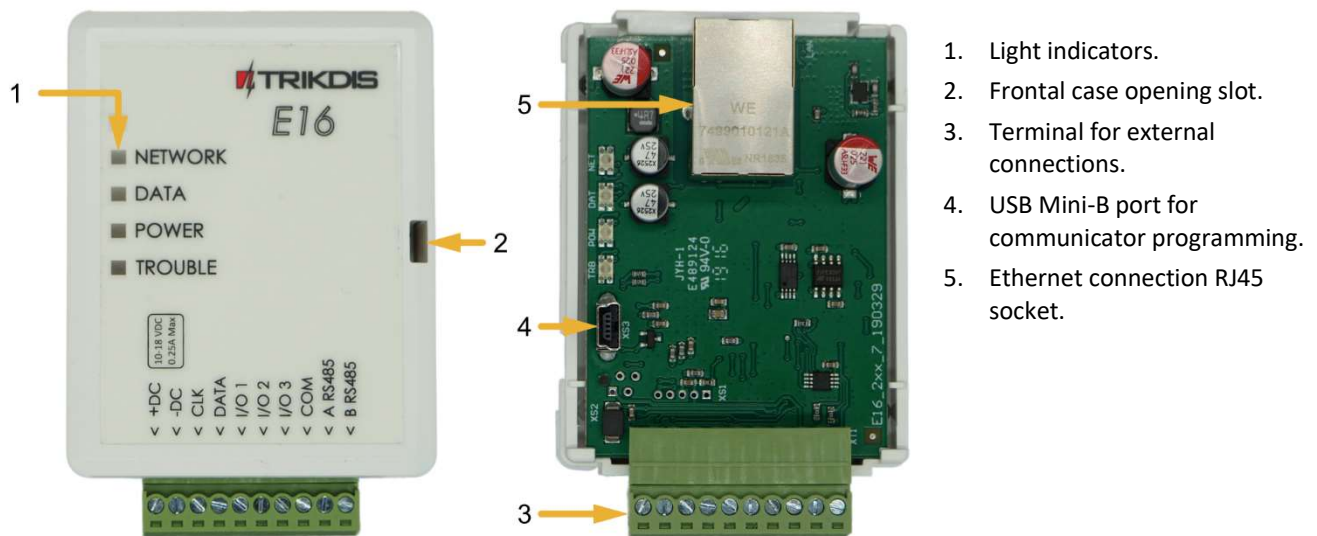

1.4 Purpose of terminals

Terminal	Description
+DC	+10 V/+18 V power supply
-DC	+10 V/+18 V power supply
CLK	Serial bus terminals for direct connection to control panel
DATA	
I/O 1	1 st input/output terminal
I/O 2	2 nd input/output terminal
I/O 3	3 rd input/output terminal
COM	Common (negative) terminal
A RS485	RS485 bus A contact
B RS485	RS485 bus B contact


1.5 LED indication of operation

Indicator	Light status	Description
NETWORK	Off	No connection to a computer network
	Green solid	Communicator is connected to a computer network
DATA	Off	No unsent events
	Green solid	Unsent events are stored in buffer
	Green blinking	(Configuration mode) Data is being transferred to/from communicator
POWER	Off	Power supply is off or disconnected
	Green solid	Power supply is on with sufficient voltage
	Yellow solid	Power supply voltage is insufficient ($\leq 11.5V$)
	Green solid and yellow blinking	(Configuration mode) Communicator is ready for configuration



Indicator	Light status	Description
TROUBLE	Yellow solid	(Configuration mode) No connection with computer
	OFF	No operation problems
	1 red blink	Connection error at the "physical" level (PHY Link status error), check LAN cable
	2 red blinks	DHCP error
	3 red blinks	DNS error
	6 red blinks	No connection with the receiver
	7 red blinks	Lost connection with control panel
	Red blinking	(Configuration mode) Memory fault
	Red solid	(Configuration mode) Firmware is corrupted

1.6 Structural schematic with *E16* usage

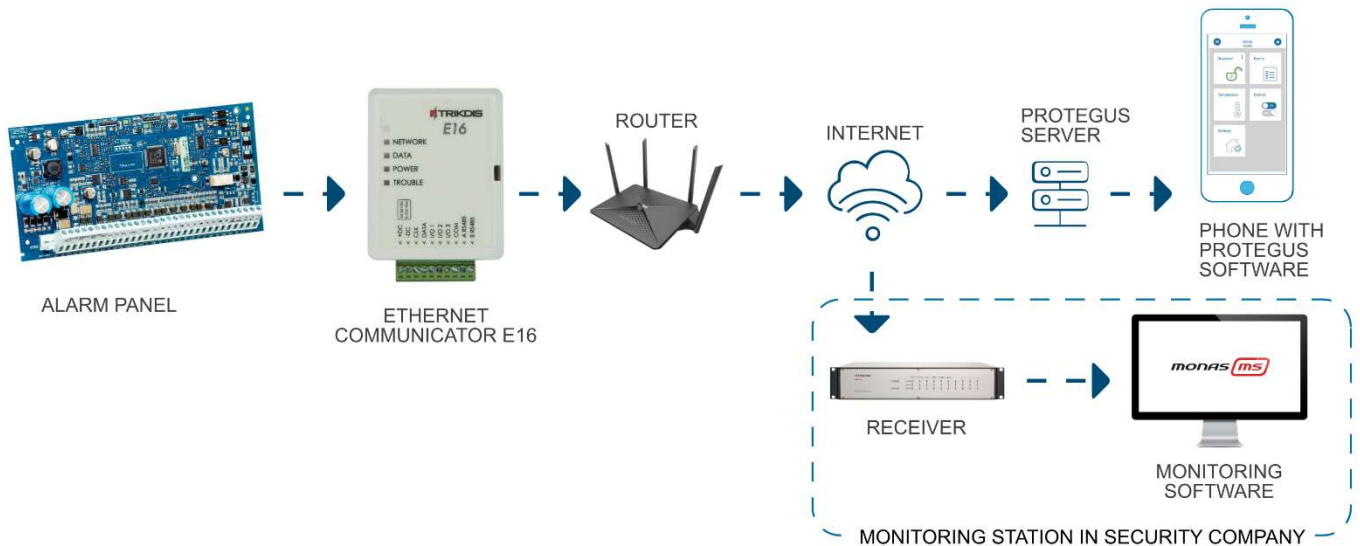

Note:

Before you begin, make sure that you have the necessary:

1. USB cable (Mini-B type) for configuration.
2. At least 4-wire cable for connecting communicator to control panel.
3. CRP2 cable for connecting to Paradox panel's serial port.
4. Flat-head 2,5 mm screwdriver.
5. Particular security control panel's installation manual.


Order the necessary components separately from your local distributor.

2 Quick configuration with *TrikdisConfig* software

1. Download **TrikdisConfig** configuration software from www.trikdis.com (type "TrikdisConfig" in the search field) and install it.
2. Open the casing of the **E16** with a flat-head screwdriver as shown below:



“Ethernet” communicator *E16*

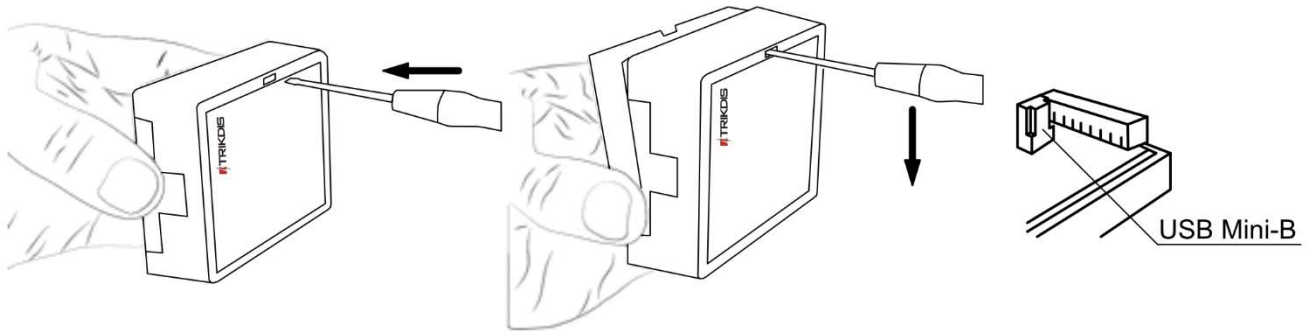

3. Using a USB Mini-B cable connect the **E16** to the computer.
4. Run **TrikdisConfig**. The software will automatically recognize the connected communicator and will open a window for configuration.
5. Click **Read [F4]** to read the communicator’s settings. If requested, enter the Administrator or Installer 6-digit code in the pop-up window.

Below we describe what settings need to be set for the communicator to begin sending events to the CMS (central monitoring station) and to allow the security system to be controlled with the **Protegun** app.

2.1 Settings for connection with Protegun app


In “System settings” window:



1. Select **Security panel model** that will be connected to the communicator.
2. Select **Remote Arm/Disarm** if you want users to be able to control the panel in **Protegun** app with their keypad code. This setting is only shown for directly controlled panels.
3. For the direct control of Paradox and Texecom panels enter **Security panel PC download password**. It must match the password that is entered in the control panel.

Note: For the direct panel control to work, you will need to change the panel settings. How to do this is described in chapter 4 “Programming the control panel”. In this section you will find information on how to change the **Security panel PC download/UDL password**.

In “User reporting” window, “PROTEGUN Cloud” tab:

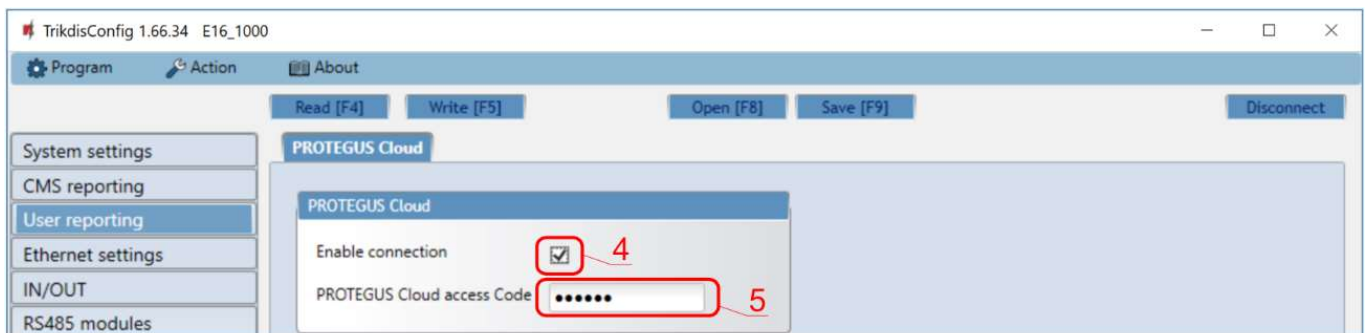

4. Tick the checkbox **Enable connection** to the **Protegun** Cloud.



5. Change the **Protegeus Cloud access Code** for logging in to **Protegeus** if you want users to be asked to enter it when adding the system to **Protegeus** app (default password – 123456).

After finishing configuration, click the button **Write [F5]** and disconnect the USB cable.

Note: For more information about other **E16** settings in **TrikdisConfig**, see chapter 6 “**TrikdisConfig** window description”.

2.2 Settings for connection with Central Monitoring Station

In “System settings” window:

1. Enter **Object ID** (account) number provided by the Central Monitoring Station (4 characters, 0-9, A-F. **Do not use FFFE, FFFF** Object ID.).
2. Select **Security panel model** that will be connected to the communicator.

In “CMS reporting” window settings for “Primary channel”:

3. **Communication type** - select the **IP** connection method.
4. **Protocol** - select the protocol type for event messages: **TRK** (to TRIKDIS receivers); **DC-09_2007** or **DC-09_2012** (to universal receivers); **TL150** (to SUR-GARD receivers).
5. **TRK encryption key** - enter the encryption key that is set in the receiver.
6. **Domain or IP** - enter the receiver's Domain or IP address.
7. **Port** - enter receiver's network port number.
8. **TCP or UDP** - choose event transmission protocol (**TCP** or **UDP**) in which events should be sent.



Note: If you selected the **DC-09** protocol, additionally enter object, line and receiver numbers in the **Settings** tab of the **CMS reporting** window.

9. (Recommended) Configure **Primary channel Backup** settings.
10. (Recommended) Configure **Parallel Channel** and its **Parallel Channel Backup** settings.

After finishing configuration, click **Write [F5]** and disconnect the USB cable.


Note: For more information about other **E16** settings in **TrikdisConfig**, see chapter 6 "**TrikdisConfig window description**".

3 Installation and wiring


3.1 Schematics for wiring the communicator to a security control panel

Following one of the schematics provided below, connect communicator to the control panel.


DSC panel connection diagram

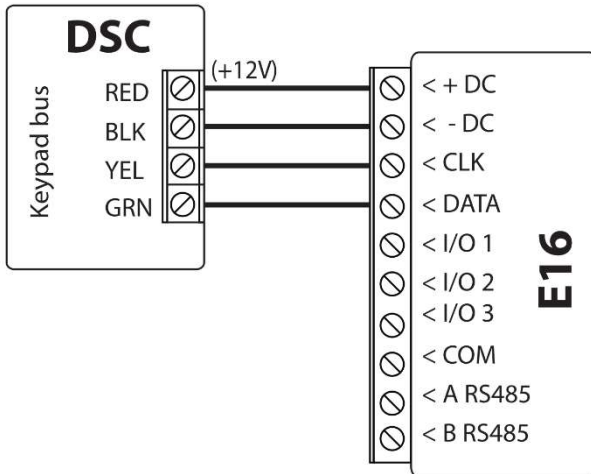


PARADOX panel connection diagram

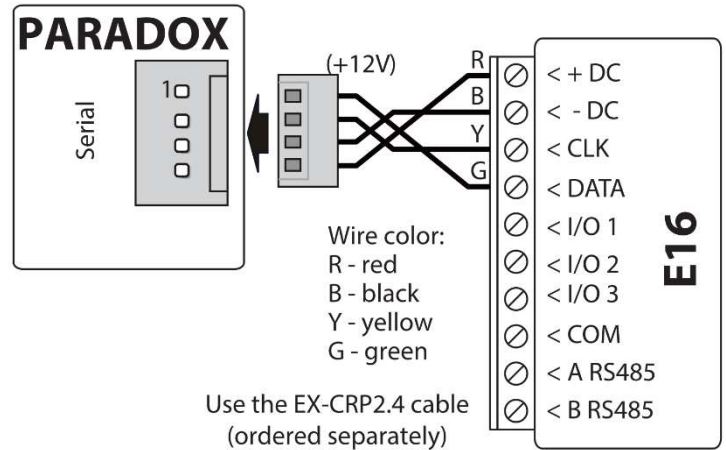

CADDX panel connection diagram

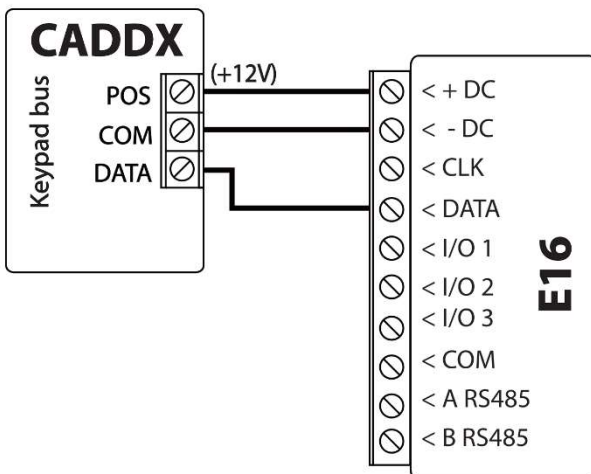


TEXECOM panel connection diagram

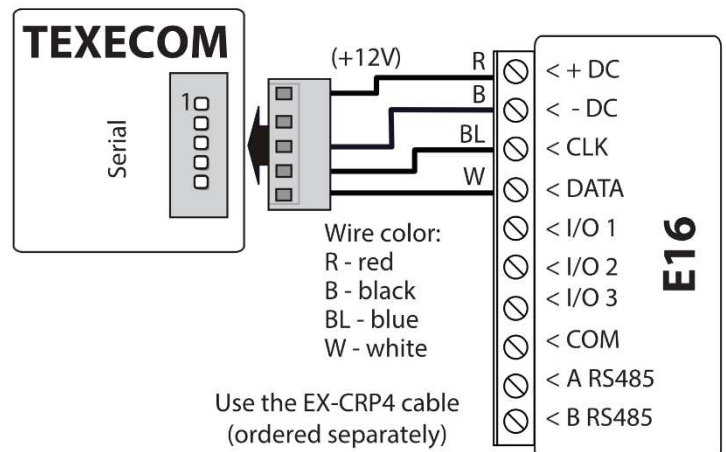




“Ethernet” communicator *E16*


INNERRANGE INCEPTION
panel connection diagram

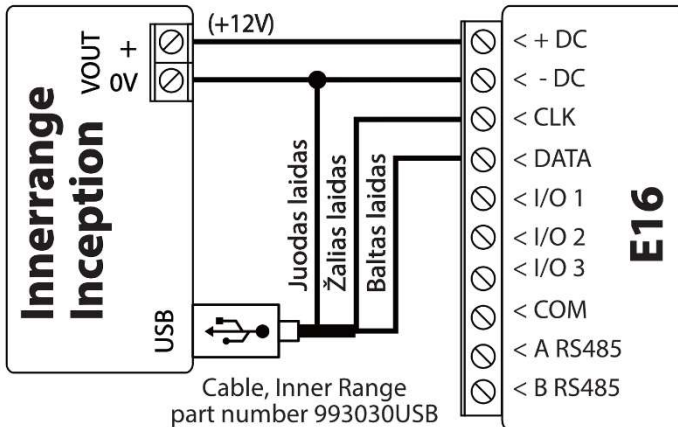


INNERRANGE INTEGRITI
panel connection diagram

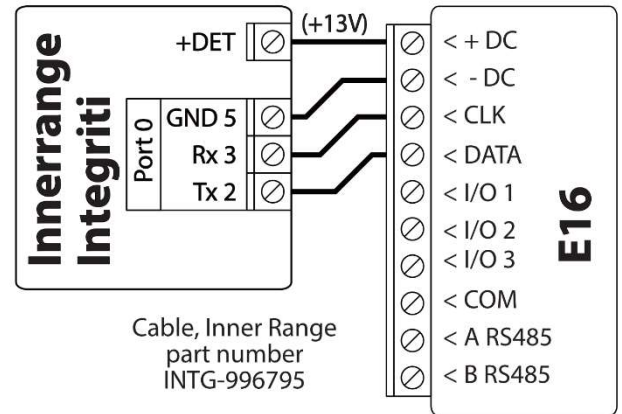


Crow Runner 4/8 ir Runner 8/16
panel connection diagram

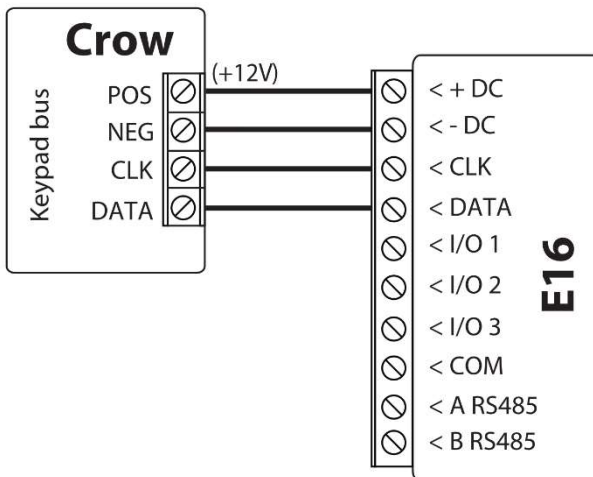

Pyronix panel connection diagram

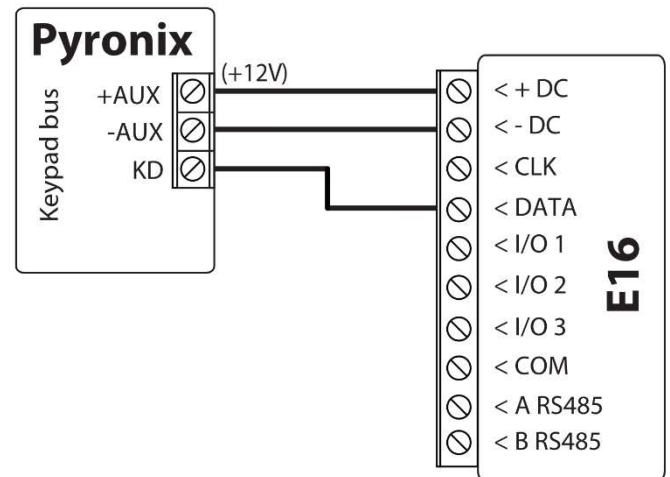

Honeywell Vista-20, Vista-48
panel connection diagram

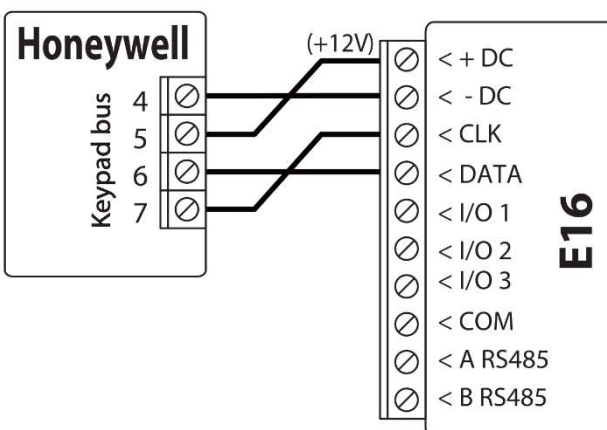


3.2 Schematic for connecting to panel keyswitch zone

Follow this schematic if the control panel will be armed/disarmed with a **E16** PGM output turning on/off the panel's keyswitch zone.

Note: **E16** communicator has 3 universal input / output terminals that can be set to the OUT (PGM) operating mode. The outputs (OUT) can control three areas of the security system. If you want to control the system in this way,




in **TriKdisConfig**, in the "System settings" window, uncheck **Remote Arm/Disarm**. The **Protegeus** apps must be configured with the settings described in chapter 5.2 "Additional settings to arm/disarm the system using the control panel's keyswitch zone".

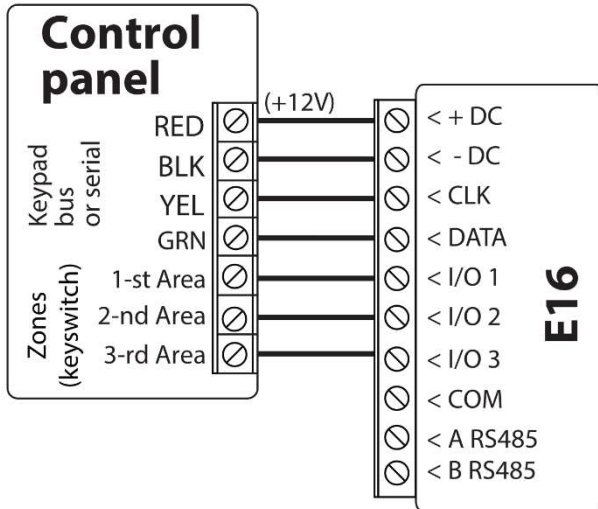

3.3 Schematics for input connection

The communicator has 3 universal input / output terminals that can be set to input IN mode. NC, NO, NO / EOL, NC / EOL, NO / DEOL, NC / DEOL circuits can be connected to the input terminal. Default input setting – NO. The input type can be changed in the **TriKdisConfig** window **IN/OUT -> Type**.


Connect the input according to the selected input type (NO, NC, NC/EOL, NO/EOL, NO/DEOL, NC/DEOL), as shown in the schemes below:

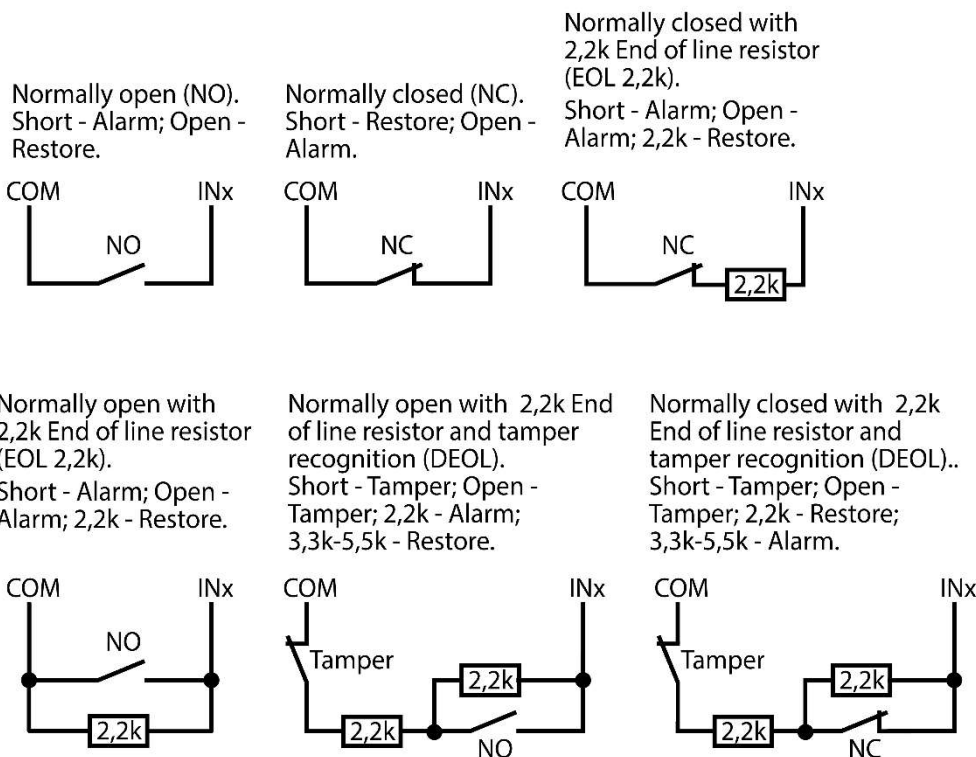


Note: If more inputs or outputs need to be connected to the communicator, connect the **TRIKDIS iO** series wired or wireless output expander. Connection method is described in the **iO** manual and chapter 3.6 "Schematics for connecting iO series expansion modules".



3.4 Connect LAN cable

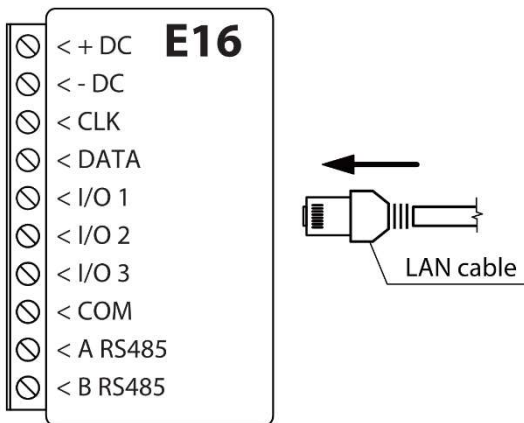


3.5 Schematics for wiring a relay

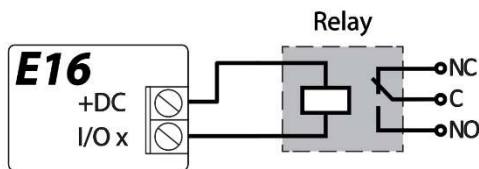

With relay contacts you can control (turn on/off) various electronic appliances. The I/O terminal of the communicator must be set to an output (OUT) mode.

3.6 Schematics for connecting iO series expansion modules

If more inputs or outputs need to be connected to the communicator, or if you want to connect a temperature sensor, connect the TRIKDIS *iO* series wired or wireless output expander. Configuration of expander modules connected to the **E16** is described in chapter 6.6 "RS485 modules" window".

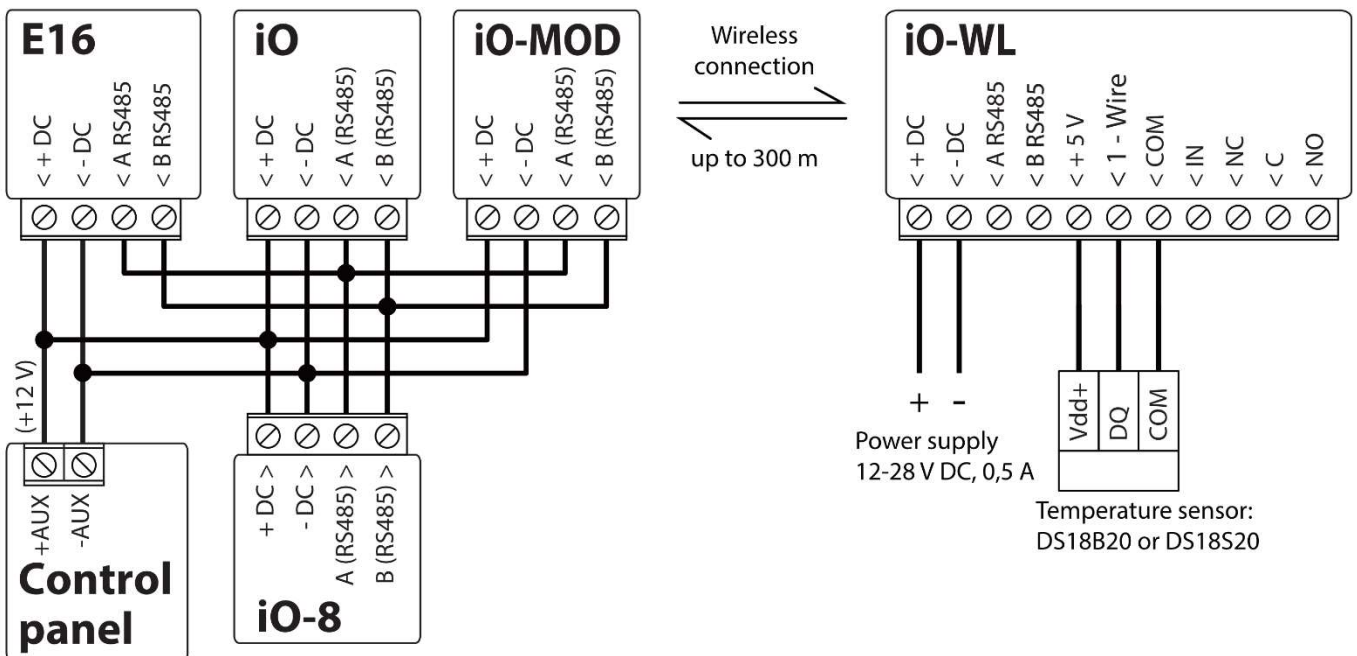

3.7 Turn on the communicator

To start the communicator, turn on the security control panel's power supply. This LED indication on the **E16** communicator must show:

- "POWER" LED illuminates green when the power is on;
- "NETWORK" LED illuminates green, when the communicator is connected to the network.



Note: If you see a different LED indication, it indicates a certain malfunction. Diagnose it by following the LED indication table in chapter 1.5 "LED indication of operation".
If the **E16** indication does not illuminate at all, check the power supply and connections.

4 Programming the control panel

Below it is described how to program the security control panel so that the **E16** communicator could read events from the panel and control it remotely.

To enable remote control of the security panel, make sure that the checkbox **Remote Arm/Disarm** is selected in the **TrikdisConfig** window "**System settings**".

DSC

DSC panels do not need to be programmed.

PARADOX

Paradox control panels need to be programmed only for direct control with **Protegeus**. You do not need to program Paradox panels for reading events.

For remote control of Paradox panels, you need to set up a PC download password. This password must match the password which was set in the **TrikdisConfig** window "**System settings**", when the checkbox next to **Remote Arm/Disarm** was selected.

To set this password, with the keyboard connected to the security control panel:

- For MAGELLAN, SPECTRA series: go to cell 911 and enter 4-digit PC download password.
- For DIGIPLEX EVO series: go to cell 3012 and enter 4-digit PC download password.

TEXECOM

Texecom control panels need to be programmed for both reading events and remote control.

You need to set the Texecom panel's **UDL passcode**. This password must match the password which was set in the **TrikdisConfig** window "**System settings**", when the box next to **Remote Arm/Disarm** was selected.

The security control panel can be programmed with Texecom software - Wintex. Enter **UDL passcode** (4-digit code) in the **Communication Options** window, **Options** tab.

Also, you can program with a keypad connected to the security control panel:

1. Enter the 4-digit installer's code and press the [Menu] button to enter the programming menu.
2. Press the [9] key immediately afterwards.
3. Press [7][6], and then [2]. Enter the 4-digit **UDL passcode** (**UDL passcode** must match the **E16** communicator's **PC login password**).
4. Press [Yes] and leave the programming mode by pressing [Menu].

UTC INTERLOGIX (CADDX)

Security control panel version must be **V2** or higher With the keyboard connected to the security control panel:

1. Press [*][8] and enter the installer's code (default - 9713).
2. Enter the device number assigned to the connected communicator (default - 0).
3. Set the settings below for each row. In sequence, enter the position, segment number and the required setting. Clicking [*] (asterisk) will return you to the local input field.

Position	Segment	Setting
23	3	12345678
37 (not necessary)	3	12345678
	4	1234567*
90	3	12345678
93	3	12345678



Position	Segment	Setting
96	3	12345678
99	3	12345678
102	3	12345678
105	3	12345678
108	3	12345678

After having programmed all the fields listed, press [Exit] twice to exit the programming mode.

INNERRANGE

Innerrange Inception security control panel version must be **2.3.0.3507-r0** or higher.

The control panel must be connected to the internet. Connect to **Innerrange Inception** by entering: <https://skytunnel.com.au/inception/SERIALNUMBER>, where SERIALNUMBER is the number of the controller that you can find on the panel's enclosure.

Open **Configuration > General > Alarm Reporting**. In the **3rd Party Device Configuration** settings group you need to enter:

1. **Enable 3rd Party Device Reporting** - select this checkbox.
2. **3rd Party Device Type** - set "Triklis".
3. **Serial port** - set "Serial Port 1 (Plugged In, In Use By 3rd Party Device)".
4. Save settings and exit the application.

Innerrange Integriti security control panel version must be **19.1.0.36608** or higher, the professional software version **19.1.0.15396** or higher.

Specify the Triklis communication protocol in the control panel configuration program. Contact ID data format. The port (TTL Port-0) of the security panel, to which the **E16** communicator is connected, has the settings 19200, 8, N, 1. Save the settings and exit the program.

Honeywell Ademco Vista

Follow these steps for **Honeywell Ademco Vista-20** and **Honeywell Ademco Vista-48** panels. **The panel's firmware version must be V5.3 or higher.** With a keypad that is connected to the panel:

1. Enter the programming mode. Enter the installer code 4)[1][1][2] and after that [8][0][0] . Alternatively, turn on the panel's power supply. In 50 seconds after the power supply is turned on, press the buttons [*] and [#] at the same time (this method can be used when programming mode was exited by pressing in keypad [*][9][8]).
2. Turn on the sending of Contact ID events via LRR. Press [*][2][9][1][#] in keypad.



3. When using the „Remote Arm/Disarm“ function, allow to use the 2nd AUI address. In keypad press [*][1][8][9][1][1][#]. Exit the programming mode. In keypad press [*][9][9]

Crow

There is no need to program Crow Runner 4/8 and Runner 8/16 panels.

5 Remote control

5.1 Adding the security system to Protegus app

With **Protegus** users will be able to control their alarm system remotely. They will see the status of the system and receive notifications about system events.

1. Download and launch the **Protegus** application or use the browser version: www.protegus.eu/login.



2. Log in with your user name and password or register and create new account.

Important: When adding the **E16** to **Protegus** check if:

1. **Protegus cloud** is enabled. See chapter 6.4 ““User reporting” windows”;
2. Power supply is connected (“POWER” LED illuminates green);
3. Registered to the network (“NETWORK” LED illuminates green).

3. Click **Add new system** and enter the **E16**’s “MAC” number. This number can be found on the device and the packaging sticker. After entering click **Next**.

5.2 Additional settings to arm/disarm the system using the control panel’s keyswitch zone

Important: The control panel zone to which the **E16** output OUT is connected to has to be set to keyswitch mode.

Follow the instructions below if the security control panel will be controlled with a **E16** PGM output, turning on/off the control panel keyswitch zone.

1. In the new window, click **Areas** in the side menu. In the next window, specify how many alarm system areas (1, 2, 3) are in the system and press **Next**.



protegeus
intelligent security & control

E16+DSC PC1864
ONLINE

Peter

Areas

Settings

Events

Next

How many Areas are in the system?

1

2

2. In the new window, identify what is the number for each of the specified areas in the security system and press **Save**.

protegeus
intelligent security & control

E16+DSC PC1864
ONLINE

Peter

Areas

Settings

Events

Save


Area 1 number

1

Area 2 number

2


3. In the side menu press **Settings** and in the newly opened window press **Settings**. Select the box **Arm/Disarm with PGM** and specify which area the output will control. One PGM output can control only one area.

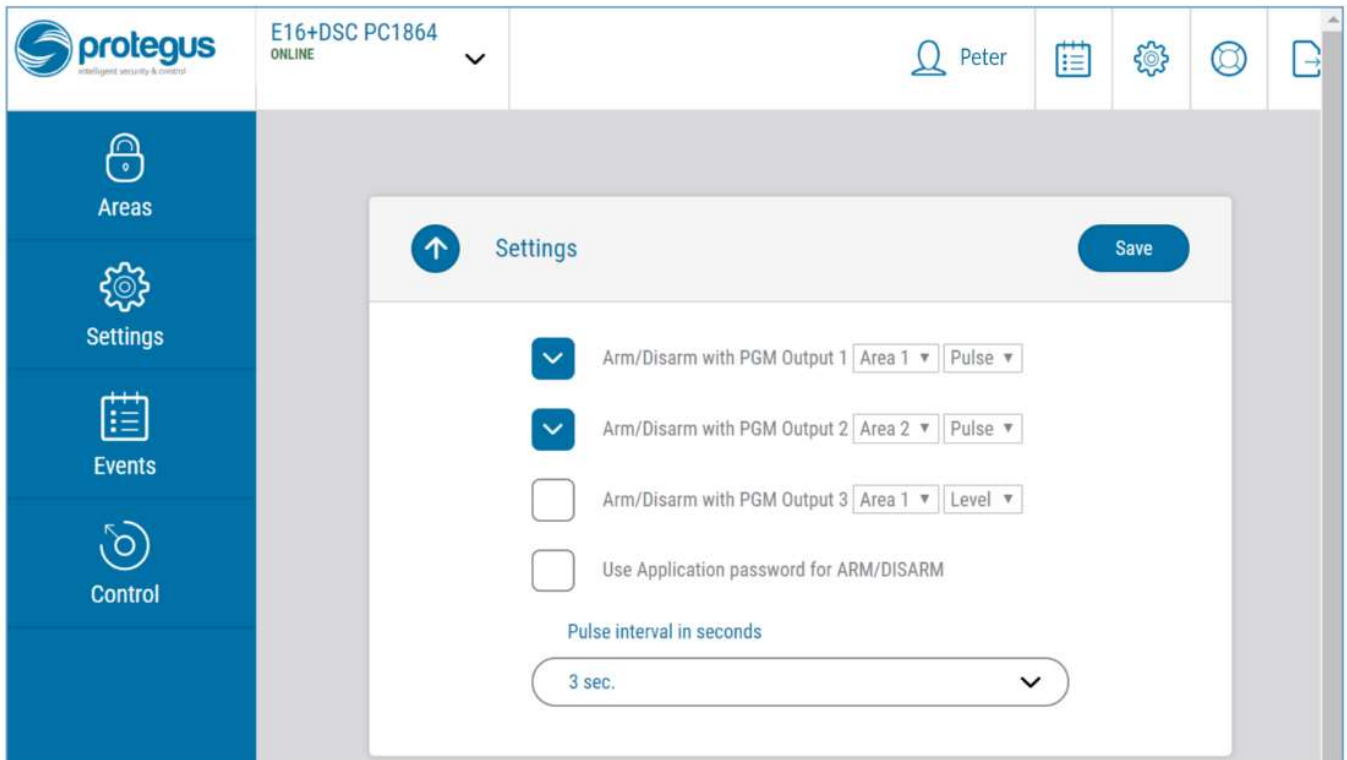

4. Select **Level** or **Pulse**, depending on the type of control panel keyswitch zone. You can also change the duration of the pulse interval if it is required for the connected control panel.
5. For additional security, you can select **Use Application password for ARM/DISARM**. Then after pressing the button to arm/disarm the alarm system, a window for entering the app password will open.

5.3 Arming/disarming the alarm system with Protegeus

1. To control the system, open the **Areas** window.
2. In the **Areas** window click the Area button. In the pop-up window select the action (arm or disarm the security system area).
3. If requested, enter the user code or **Protegeus** password.

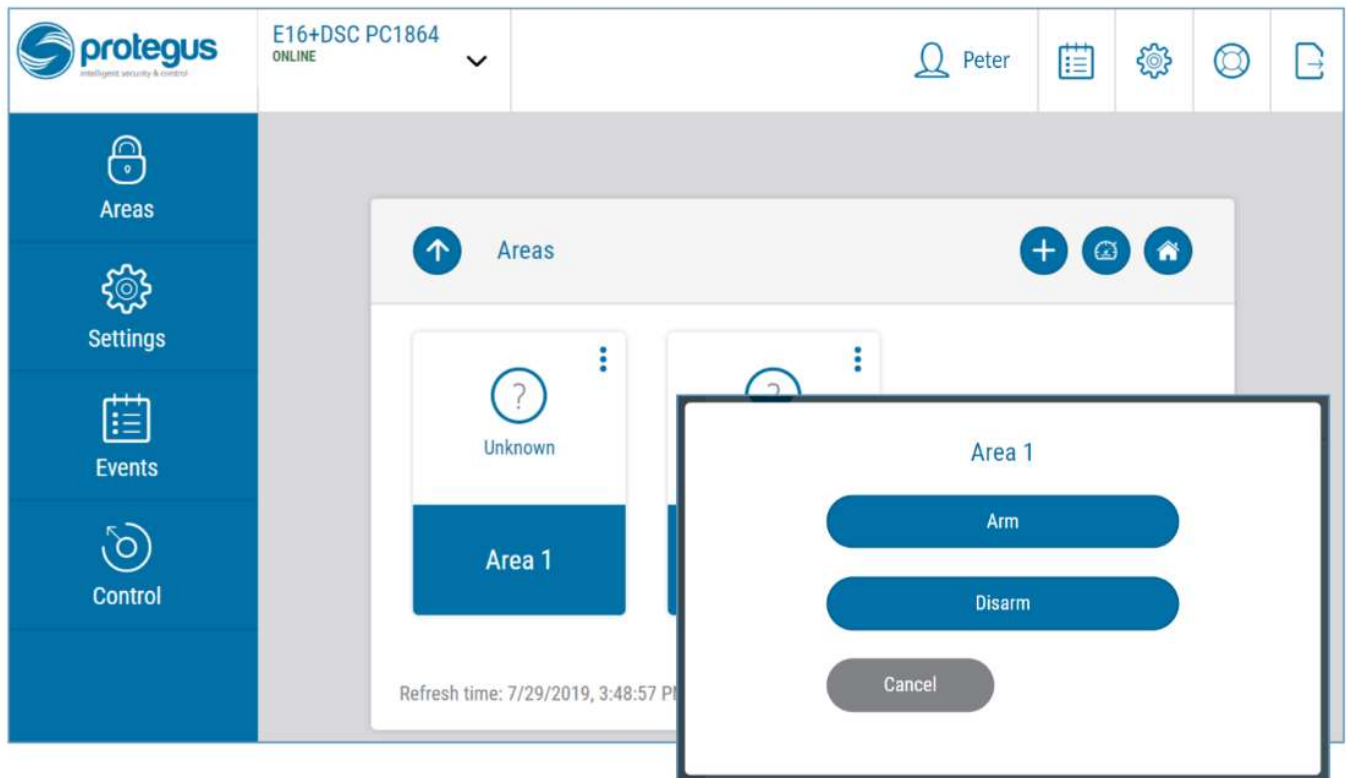

6 TrikdisConfig window description

6.1 *TrikdisConfig* status bar description

After connecting the *E16* and clicking **Read [F4]**, *TrikdisConfig* will provide information about the connected device in the status bar:

MAC/Unique ID: 5410ECAA0842									
Status:	reading done	Device	E16_1000	SN: 000024	BL: 1.00	FW: 1.10	HW: 0.01	State	HID Administrator
Object	Description								
MAC/Unique ID	Device MAC number								
Status	Operating condition								
Device	Device type (E16 should be shown)								
SN	Device serial number								
BL	Browser version								
FW	Device firmware version								
HW	Device hardware version								
Status	Connection to program type (via USB or remote)								
Administrator	Access level (shown after access code is approved)								

After pressing **Read [F4]**, the program will read and show the settings which are set in the *E16*. Set the necessary settings according to the *TrikdisConfig* window descriptions given below.



6.2 "System settings" window

"General" settings group

- **Object ID** – if the events will be sent to the CMS (Central Monitoring Station), enter the account number provided by the CMS (4 characters hexadecimal number, 0-9, A-F. **Do not use FFFE, FFFF Object ID.**).
- Select the **Security Panel model** that will be connected to the communicator.
- **Remote Arm/Disarm** - when the checkbox is selected, the **E16** will directly control the control panel remotely. This setting will be visible only for directly controlled panels. For direct control of the control panels you need to change the panel settings, as described in section 4 "Programming the control panel".
- **Security panel PC download password** - for the direct control of Paradox and Texecom control panels you need to enter the PC/UDL password. It must match the password that was entered in the control panel. How to change this password is described in section 4 "Programming the control panel".
- **Time set** - select which server to use for time synchronization.

"Access" settings group

When setting up the communicator **E16** there are two levels of access for, the administrator and the installer:

- **Administrator code** - allows you to access all configuration fields (default code - 123456).
- **Installer code** - limited access for configuring the communicator (default code - 654321).
- **Only an administrator can restore** - if the box is checked, factory settings can be restored only by entering the administrator code.
- **Allow installer to change** – the administrator can specify which settings can be changed by the installer.



6.3 "CMS reporting" window

"CMS settings" tab

The communicator sends events to the monitoring station via a wired internet (IP) connection.

Events can be sent over several channels of communication. The primary and parallel communication channels can operate simultaneously, this way the communicator can send events to two receivers at the same time. Backup channels can be assigned for both primary and parallel channels, which will be used when the connection via the primary or parallel channel is interrupted. Communication is encoded and password protected. A TRIKDIS receiver is required for receiving and sending event information to the monitoring programs:

- For connection over IP - software receiver IPcom Windows/Linux, hardware IP/SMS receiver RL14 or multichannel receiver RM14.

"Primary channel" settings group

- **Communication type** - select which method for connecting to the monitoring station receiver will be used (IP).
- **Protocol** - select in which coding the events should be sent: **TRK** (to TRIKDIS receivers); **DC-09_2007** or **DC-09_2012** (to universal receivers); **TL150** (to SUR-GARD receivers).
- **TRK encryption key** - 6-digit message encryption key. The key written to the communicator must match the receiver's key.
- **Domain or IP** - enter the domain or IP address of the receiver.
- **Port** - enter the network port number of the receiver.
- **TCP or UDP** - select in which protocol (TCP or UDP) the events should be sent.

"Primary channel Backup" settings group

Enable the backup channel mode to send events via backup channel if connection via primary channel is lost. Backup channel settings are same as described above.

"Parallel channel" settings group

Events are transmitted in parallel with the first channel through this channel. When the second channel is enabled, events can be sent simultaneously to two receivers (e.g., local and centralized monitoring stations). Parallel channel settings are the same as described above.



"Settings" tab

"Settings" settings group

- **Test period** - TEST event period for testing the connection. Test events are sent as Contact ID messages and forwarded to the monitoring software.
- **IP ping period** – period for sending internal PING heartbeats. These messages are only sent via IP channel. The receiver will not forward PING messages to the monitoring software to avoid overloading it. Notifications will only be sent to the monitoring software if the receiver fails to receive PING messages from the device within the set time.

By default, the "Connection lost" notification will be transmitted to the monitoring software if the PING message is not received by the receiver over a time period three times longer than set in the device. E.g. if the PING period is set for 3 minutes, the receiver will transfer the "Connection lost" notification if a PING message is not received within 9 minutes.

PING heartbeats keep the active communication session between the device and the receiver. An active session is required for remote connection, control and configuration of the device. We recommend setting the PING period for no more than 5 minutes.

- **Backup reporting after** - indicates the number of unsuccessful attempts to send the message via Primary channel. If device fails to transmit specified number of times, the device will connect to transmit the messages via Backup channel.
- **Return from backup after** - time after which the **E16** will attempt to reconnect and transmit messages via the Primary channel.

"DC-09 settings" settings group


The settings are displayed when the **DC-09_2007** or **DC-09_2012** protocol is set in the communication channel **Protocol** field for sending events to universal receivers.

- **Object ID in DC-09** - enter the object number. The object number entered in this field will be used if DC-09 encoding is selected. A hexadecimal number from 3 to 16 characters can be entered. This Number is provided by the CMS (central monitoring station).
- **DC-09-line No.** - enter line number of the receiver.
- **DC-09 receiver No.** - enter the receiver number.



6.4 "User reporting" window

"PROTEGUS Cloud" tab

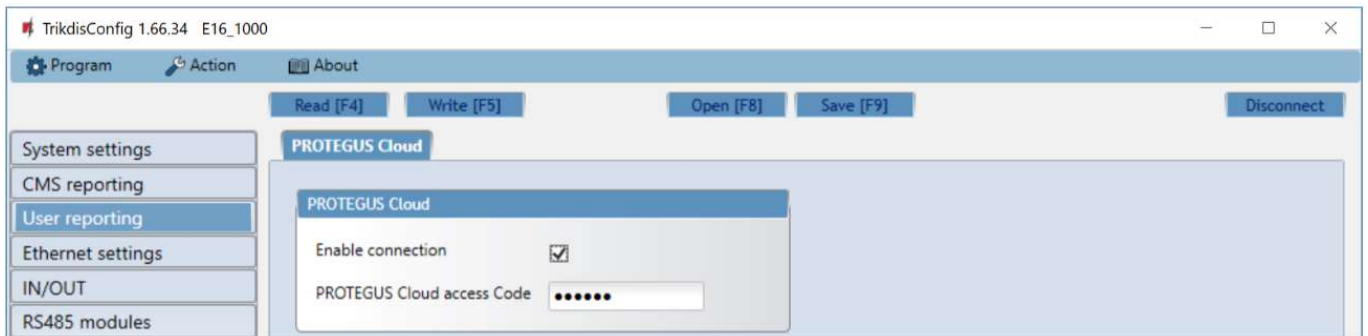

Protegun service allows users to remotely monitor and control the communicator. For more information about **Protegun** service, visit www.protegun.eu.

"Protegun Cloud" settings group

- **Enable connection** – enable the **Protegun** service, the **E16** will be able to exchange data with **Protegun** app and to be remotely configured via **TrikdisConfig**.
- **Protegun Cloud access Code** - 6-digit code for connecting to the **Protegun** app (default - 123456).

6.5 "Ethernet settings" window



"Ethernet settings" settings group

- **Use DHCP** - check the box to have the communicator automatically register to the network. If the auto-register fails, you will need to enter it manually:
 - **Static IP** – static IP address for when manual registering mode is set.
 - **Subnet mask** – subnet mask for when manual registering mode is set.
 - **Default gateway** – gateway address for when manual registering mode is set.
- **DNS1, DNS2** - (Domain Name System) identifies the server that specifies the IP address of the domain. Used when domain is set in the communication channel **Domain or IP** field (not IP address). Google DNS server is set by default.



6.6 "IN/OUT" windows

Terminal Function	Type
1 Disabled	
2 IN	NO
3 OUT	

Event	Enable	E/R	CID	Part.	Zone	CID	Enable	E/R	CID	Part.	Zone
IN2_ALARM	☒	Event	130	99	002		☒	Restore	130	99	002
IN2_TAMPER	☒	Event	144	99	002		☒	Restore	144	99	002

The communicator has 3 universal (input / output) terminals. The table can set the terminal operating mode (Off, IN, OUT). The input must specify the type of circuit to be connected NC, NO, NO / EOL, NC / EOL, NO / DEOL, NC / DEOL.

Additional sensors can be connected to the communicator inputs. When the sensor is triggered, the communicator will send an event message. The input is assigned a Contact ID code, which will be sent to CMS and **Protegas**.

- **Enable** – checked event fields where messages will be sent to CMS and **Protegas**.
- **E/R** – choose what type of event will be sent when input is triggered – **Event** or **Restore**.
- **CID** – enter the event code or leave the default value. Upon entering the event, the event code will be sent to **Protegas** and CMS.
- **Part.** – enter the partition (area) number that will be sent when an internal event occurs and the system is restored.
- **Zone** - enter the zone number that will be sent when an internal event occurs and the system is restored.

6.7 "RS485 modules" window

"Modules list" tab

IO series expanders can be connected to the communicator to add additional inputs, outputs and serial buses for temperature sensors. Connected expanders must be added to the **Modules list** table.

ID	Module Type	Serial No
1	Evnandlar iO-8	000003
2	Not Available	
3	Expander IO	
4	Expander IO-WL	

- **Module type** – select the module that is connected to the communicator via RS485 from the list.
- **Serial No** – enter the module serial number (6 digits), which is indicated on stickers on the module's case and packaging.

Go to **RS485 modules** → **Module**.

"Module" tabs

After adding the expander to the communicator as described above, in the **RS485 modules** window a new tab will appear with this module's settings. The tab will be given a number. Below we describe the settings for **IO-8** and **IO** series expanders.



iO-8 expander settings window

Event	Enable	E/R	CID	Part.	Zone
BUS_FAULT	☒	Event	333	91	001
INPUT1	☒	Event	130	91	001
INPUT2	☒	Event	130	91	002
INPUT3	☒	Event	130	91	003

Enable	E/R	CID	Part.	Zone	Object Input type
☒	Restore	333	91	001	
☒	Restore	130	91	001	NO
☒	Restore	130	91	002	NO
☒	Restore	130	91	003	NO

Expander **iO-8** has 8 universal (input/output) terminal contacts. Up to four **iO-8** expanders can be connected.

- **Input Count** – select what number of terminal contacts should be set to input (IN) mode. The rest of the terminal contacts will become outputs (OUT).

Settings for controllable outputs are set directly in Protegus app. There you can assign an output for arming/disarming the alarm system or for remote control of devices.

In the table inputs can be assigned Contact ID event and restore codes. After input is triggered, the communicator will send an event with set event code to monitoring station receiver, Protegus app.

Contact ID event code:

- **Enable** – allow message transmission, when the input is triggered.
- **E/R** – choose what type of event will be sent when input is triggered – **Event** or **Restore**.
- **CID** – assign a Contact ID event code to the input.
- **Part.** – assign the partition (area) to the input. It is set automatically: if the module no. is 1, then the area is 91; if the module no. is 4, then the area is 94.
- **Zone** – set the zone number for the input.

Contact ID restore code:

- **Enable** – allow message transmission when the input is restored.
- **E/R** – choose what type of event will be sent when input is restored – **Restore** or **Event**.
- **CID** – assign the Contact ID restore code to the input.
- **Part.** – assign the partition (area) to the input. It is set automatically: if the module no. is 1, then the area is 91; if the module no. is 4, then the area is 94.
- **Zone** – set the zone number for the input.
- **Input type** – select the type of the input (NO or NC).



iO expander settings window

TrikiDisConfig 1.66.34 E16_1000

Program Action About

Read [F4] Write [F5] Open [F8] Save [F9] Disconnect

System settings
CMS reporting
User reporting
Ethernet settings
IN/OUT
RS485 modules
Event summary
Firmware

Remember password ☐
Show passwords ☐
Default settings

Modules list **Module 1**

Expander IO

Serial No: 000003

Input IN1 type: NO

Max °C(T1): 30

Min °C(T2): 15

Relay control: If T>T1 AND None then OFF 0 h 0 min 0 s

Contact ID event code						Contact ID restore code					
Event	Enable	E/R	CID	Part.	Zone	Event	Enable	E/R	CID	Part.	Zone
INPUT	☒	Event	130	91	001	Restore	☒	Restore	130	91	001
HIGH_TEMPERATURE	☒	Event	158	91	001	Restore	☒	Restore	158	91	001
LOW_TEMPERATURE	☒	Event	159	91	001	Restore	☒	Restore	159	91	001
BUS_FAULT	☒	Event	333	91	001	Restore	☒	Restore	333	91	001

Expander **iO** has: terminals for 1 input, 1 output (relay contacts) and 1-Wire serial bus for connecting temperature sensors.

Relay output can be controlled according to logical (AND, OR, XOR) conditions.

- **Input IN1 type** – set the input type (NO or NC).
- **Max °C(T1)** – when the temperature is higher than this setting, an event message will be generated. For an event message to be generated, it must be enabled in the table.
- **Min °C(T2)** – when the temperature is lower than this setting, an event message will be generated. For an event message to be generated, it must be enabled in the table.
- **Relay control** – set logical (AND, OR, XOR) conditions, upon which the relay output will be controlled.

In the table inputs can be assigned Contact ID event and restore codes. After an input is triggered, the communicator will send an event with the set event code to the monitoring station receiver and to **Proteagus** app. Set as described in the previous page about **iO-8 expander settings window**.

6.8 "Event summary" window

This window allows you to turn on, off, and modify internal messages sent by your device. Disabling an internal message in this window will prevent it from being sent regardless of other settings.

TrikiDisConfig 1.66.34 E16_1000

Program Action About

Read [F4] Write [F5] Open [F8] Save [F9] Disconnect

System settings
CMS reporting
User reporting
Ethernet settings
IN/OUT
RS485 modules
Event summary

Contact ID event code						Contact ID restore code					
Event	Enable	E/R	CID	Part.	Zone	Event	Enable	E/R	CID	Part.	Zone
COMMUNICATION	☐	Event	350	99	999	Restore	☐	Restore	350	99	999
POWER	☒	Event	302	99	999	Restore	☒	Restore	302	99	999
REMOTE_FINISHED	☒	Event	412	99	999	Event	☐	Event			
REMOTE_STARTED	☒	Event	411	99	999	Event	☐	Event			
START	☒	Event	700	99	999	Event	☐	Event			
TEST	☒	Event	602	99	999	Event	☐	Event			

- **COMMUNICATION** – message about connection error between the control panel and **E16**.
- **POWER** – message about low power supply voltage.
- **REMOTE_STARTED** – message about remote connection to configure **E16** with **TrikiDisConfig**.
- **REMOTE_FINISHED** – message about disconnection from remote configuration with **TrikiDisConfig**.
- **START** – message about **E16** connecting to the network.
- **TEST** – periodic test message.



Note: To enable periodic TEST messages and set their period, go to **CMS reporting -> Settings -> Test period**.

- **Enable** – when selected, the sending of messages is enabled.

You can change the Contact ID code for each event, and also the zone and partition number.

6.9 Restoring factory settings

To restore the communicator's factory settings, you need to click the **Restore** button in the *TrikdisConfig* window.

Default settings

Restore

MAC/Unique ID:
5410ECA0842

Status: reading done Device: E16_1000 SN: 000024 BL: 1.00 FW: 1.10 HW: 0.01 State: HID Administrator

7 Remote configuration

Important: Remote configuration will work only if:

1. **Protegeus cloud** is enabled. How to enable cloud is described in section 6.4 "User reporting" window";
2. Power supply is connected ("POWER" LED illuminates green);
3. Registered to the network ("NETWORK" LED illuminates green).

1. Start the configuration program *TrikdisConfig*.
2. In the **Remote access** section enter the communicator's **MAC** number. This number can be found on the device and the packaging sticker.

Remote access

Choose module Unique ID System Name

Configure **Control**

3. (Optional) in the **System name** field, enter the desired name for the **E16** with this Unique ID.
4. Press **Configure**.
5. In the newly opened window click **Read [F4]**. If required, enter the administrator or installer code. To save the password, select **"Remember password"**.
6. Set the necessary settings and when finished, click **Write [F5]**.

8 Test communicator performance

When the configuration and installation is complete, perform a system check:

1. Generate an event:
 - by arming/disarming the system with the control panel's keypad;
 - by triggering a zone alarm when the security system is armed.
2. Make sure that the event arrives to the CMS (central monitoring station) and/or is received in the **Protegeus** application.
3. To test communicator input, trigger it and make sure to receive the correct event.
4. To test the communicator outputs, activate them remotely and check their operation.
5. If the security control panel will be controlled remotely, arm/disarm the security system remotely by using the **Protegeus** app.




9 Firmware update

Note: When the communicator is connected to **TrikdisConfig**, the program will automatically offer to update the device’s firmware if updates are present. Updates require an internet connection. Antivirus software, firewall or strict access to internet settings can block the automatic firmware updates. In this case, you will need to reconfigure your antivirus program.

The communicator’s firmware can also be updated or changed manually. After an update, all previously set settings will remain unchanged. When writing firmware manually, it can be changed to a newer or older version. To update:

1. Run **TrikdisConfig**.
2. Connect the communicator via USB cable to the computer or connect to the communicator remotely.
 - If a newer firmware version exists, the software will offer to download the newer firmware version file.
3. Select the menu branch **Firmware**.

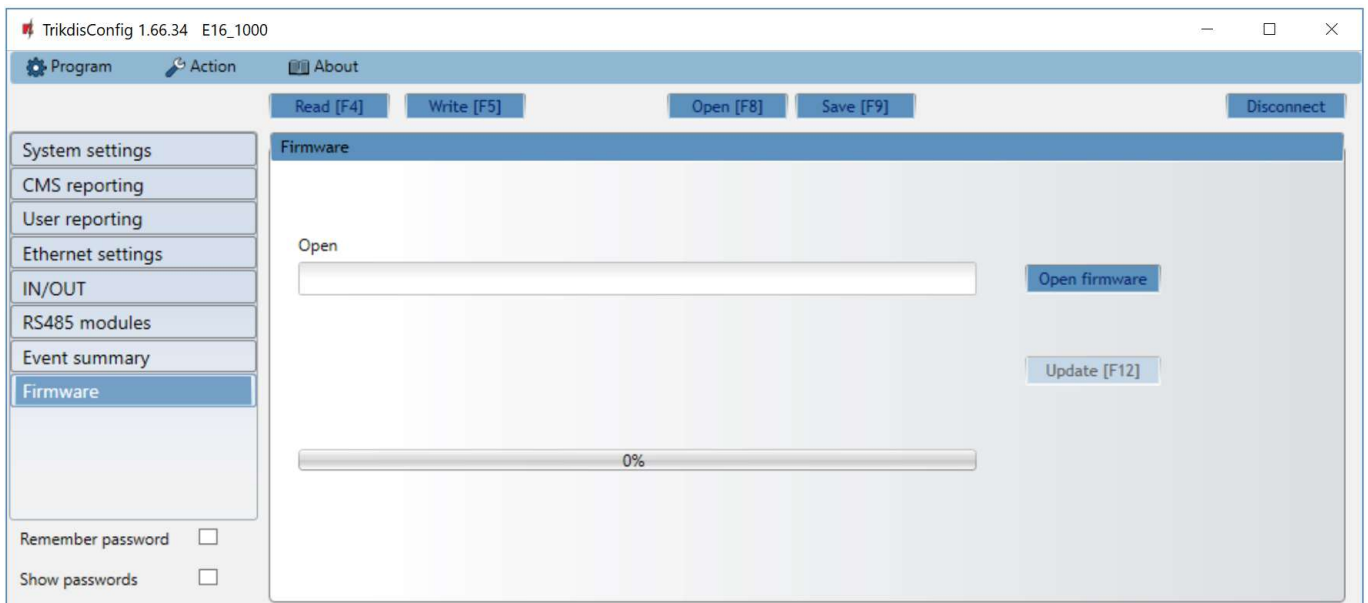

4. Press **Open firmware** and select the required firmware file. If you do not have the file, the newest firmware file can be downloaded by registered users from www.trikdis.com , under the download section of the **E16** communicator.
5. Press **Update [F12]**.
6. Wait for the update to complete.



10 Annex

The communicator can work with a SUR-GARD receiver. The communicator converts Contact ID codes received from the alarm control panel into SIA codes.

Contact ID to SIA code conversion table

System Event	CID Report Code	SIA Report Code
Medical alarm	E100	"MA"
Personal emergency	E101	"QA"
Fire in zone: <z>	E110	"FA"
Water flow detected in zone: <z>	E113	"SA"
Pull station alarm in zone: <z>	E115	"FA"
Panic in zone: <z>	E120	"PA"
Panic alarm by user: <v>	E121	"HA"
Panic alarm in zone: <z>	E122	"PA"
Panic alarm in zone: <z>	E123	"PA"
Panic alarm in zone: <z>	E124	"HA"
Panic alarm in zone: <z>	E125	"HA"
Alarm active in zone: <z>	E130	"BA"
Alarm active in zone: <z>	E131	"BA"
Alarm active in zone: <z>	E132	"BA"
Alarm active in zone: <z>	E133	"BA"
Alarm active in zone: <z>	E134	"BA"
Alarm active in zone: <z>	E135	"BA"
Tamper active in zone: <z>	E137	"TA"
Intrusion verified in zone: <z>	E139	"BV"
Alarm active in zone: <z>	E140	"UA"
System failure (143)	E143	"ET"
Tamper active in zone: <z>	E144	"TA"
Tamper active in zone: <z>	E145	"TA"
Alarm active in zone: <z>	E146	"BA"
Alarm active in zone: <z>	E150	"UA"
Gas detected in zone: <z>	E151	"GA"
Water leakage detected in zone: <z>	E154	"WA"
Foil break detected in zone: <z>	E155	"BA"
High temperature at sensor: <n>	E158	"KA"
Low temperature at sensor: <n>	E159	"ZA"
CO detected in zone: <z>	E162	"GA"
Fire failure in zone: <z>	E200	"FS"
Monitored alarm	E220	"BA"
System failure (300)	E300	"YP"
AC power supply loss	E301	"AT"
Low battery	E302	"YT"
System failure (304)	E304	"YF"



System Event	CID Report Code	SIA Report Code
System reset in zone: <z>	E305	"RR"
Panel programming changed	E306	"YG"
System shutdown	E308	"RR"
Battery failure (309)	E309	"YT"
Ground fault	E310	"US"
Battery failure (311)	E311	"YM"
Power supply overcurrent (312)	E312	"YP"
Engineer reset by user: <v> (313)	E313	"RR"
Sounder/Relay failure	E320	"RC"
System failure (321)	E321	"YA"
System failure (330)	E330	"ET"
System failure (332)	E332	"ET"
System failure (333)	E333	"ET"
System failure (336)	E336	"VT"
System failure (338)	E338	"ET"
System failure (341)	E341	"ET"
System failure (342)	E342	"ET"
System failure (343)	E343	"ET"
System failure (344)	E344	"XQ"
System communication failure (350)	E350	"YC"
System communication failure (351)	E351	"LT"
System communication failure (352)	E352	"LT"
System failure (353)	E353	"YC"
System communication failure (354)	E354	"YC"
System failure (355)	E355	"UT"
Fire trouble in zone: <z>	E373	"FT"
Trouble in zone: <z>	E374	"EE"
Trouble in zone: <z>	E378	"BG"
Trouble in zone: <z>	E380	"UT"
Wireless zone fault: <z>	E381	"US"
Wireless module failure (382)	E382	"UY"
Tamper active in zone: <z>	E383	"TA"
Low battery in wireless zone: <z>	E384	"XT"
Trouble in zone: <z> (389)	E389	"ET"
Trouble in zone: <z> (391)	E391	"NA"
Trouble in zone: <z> (393)	E393	"NC"
User <v> disarmed the system	E400	"OP"
User <v> disarmed the system	E401	"OP"
Automatic disarm	E403	"OA"
Deferred disarm <v> user	E405	"OR"
Alarm cancelled by user: <v>	E406	"BC"



System Event	CID Report Code	SIA Report Code
User <v> disarmed remotely	E407	"OP"
Quick disarm	E408	"OP"
Remote disarm	E409	"OS"
Callback request made by CMS	E411	"RB"
Successful data download	E412	"RS"
Entry access denied for user <v>	E421	"JA"
Entry by user <v>	E422	"DG"
Forced Access <z> zone	E423	"DF"
Exit access denied for user <v>	E424	"DD"
Exit by user <v>	E425	"DR"
User <v> disarmed too early	E451	"OK"
User <v> armed too late	E452	"OJ"
User <v> Failed to Disarm	E453	"CT"
User <v> Failed to Arm	E454	"CI"
Auto arm failed	E455	"CI"
Partial arm by user: <v>	E456	"CG"
Exit violation by user: <v>	E457	"EE"
System disarmed after alarm by user: <v>	E458	"OR"
Recent arm <v> user	E459	"CR"
Wrong code entered	E461	"JA"
Auto-arm time extended by user: <v>	E464	"CE"
Device disabled (501)	E501	"RL"
Device disabled (520)	E520	"RO"
Wireless sensor disabled in zone:<z> (552)	E552	"YS"
Zone <z> bypassed	E570	"UB"
Zone <z> bypassed	E571	"FB"
Zone <z> bypassed	E572	"MB"
Zone <z> bypassed	E573	"BB"
Group bypass by user: <v>	E574	"CG"
Zone <z> bypassed	E576	"UB"
Zone <z> bypass cancelled	E577	"UB"
Vent zone bypass	E579	"UB"
Walk test activated by user:<v>	E607	"TS"
Manual test report	E601	"RX"
Periodic test report	E602	"RP"
System event (605)	E605	"JL"
System event (606)	E606	"LF"
Periodic test report with trouble	E608	"RY"
System event (622)	E622	"JL"
System event (623)	E623	"JL"
Time/Date was reset by user <v>	E625	"JT"



System Event	CID Report Code	SIA Report Code
Inaccurate Time/Date	E626	"JT"
System programming started	E627	"LB"
System programming finished	E628	"LS"
System event (631)	E631	"JS"
System event (632)	E632	"JS"
System not active (654)	E654	"CD"
Medical alarm restored	R100	"MH"
Personal emergency restored	R101	"QH"
No more fire alarm in zone: <z>	R110	"FH"
No more water flow alarm in zone: <z>	R113	"SH"
Panic alarm restored in zone: <z>	R120	"PH"
Panic alarm cancelled by user: <v>	R121	"HH"
Panic alarm restored in zone: <z>	R122	"PH"
Panic alarm restored in zone: <z>	R123	"PH"
Panic alarm restored in zone: <z>	R124	"HH"
Panic alarm restored in zone: <z>	R125	"HH"
No more alarm in zone: <z>	R130	"BH"
No more alarm in zone: <z>	R131	"BH"
No more alarm in zone: <z>	R132	"BH"
No more alarm in zone: <z>	R133	"BH"
No more alarm in zone: <z>	R134	"BH"
No more alarm in zone: <z>	R135	"BH"
No more tamper in zone: <z>	R137	"TA"
No more alarm in zone: <z>	R140	"UH"
No more system failure (143)	R143	"UR"
No more tamper in zone: <z>	R144	"TR"
No more tamper in zone: <z>	R145	"TR"
No more alarm in zone: <z>	R146	"BH"
No more alarm in zone: <z>	R150	"UH"
No more gas alarm in zone: <z>	R151	"GH"
No more water leakage alarm in zone: <z>	R154	"WH"
Foil break restored in zone: <z>	R155	"BH"
Temperature has normalized at sensor: <n>	R158	"KH"
Temperature has normalized at sensor: <n>	R159	"ZH"
No more CO alarm in zone: <z>	R162	"GH"
No more fire failure in zone: <z>	R200	"FV"
Monitored restore alarm	R220	"BH"
No more system failure (300)	R300	"YA"
AC power supply OK	R301	"AR"
Battery OK	R302	"YR"
No more system failure (304)	R304	"YG"



System Event	CID Report Code	SIA Report Code
System reset restored in zone: <z>	R305	"RR"
No more battery failure (309)	R309	"YR"
Restore ground fault	R310	"UR"
No more battery failure (311)	R311	"YR"
Restore power supply overcurrent (312)	R312	"YQ"
No more sounder/Relay failure	R320	"RO"
No more system failure (321)	R321	"YH"
No more system failure (330)	R330	"ER"
No more system failure (332)	R332	"ER"
No more system failure (333)	R333	"ER"
No more system failure (336)	R336	"VR"
No more system failure (338)	R338	"ER"
No more system failure (341)	R341	"ER"
No more system failure (342)	R342	"ER"
No more system failure (344)	R344	"XH"
No more system communication failure (350)	R350	"YK"
No more system communication failure (351)	R351	"LR"
No more system communication failure (352)	R352	"LR"
No more system failure (353)	R353	"YK"
No more system communication failure (354)	R354	"YK"
No more system failure (355)	R355	"UJ"
Fire trouble restored in zone: <z>	R373	"FJ"
No more trouble in zone: <z>	R374	"EA"
No more trouble in zone: <z>	R380	"UJ"
No more wireless zone fault: <z>	R381	"UR"
No more wireless module failure (382)	R382	"BR"
No more tamper in zone: <z>	R383	"TR"
Battery OK in wireless zone: <z>	R384	"XR"
No more trouble in zone: <z> (391)	R391	"NS"
No more trouble in zone: <z> (393)	R393	"NS"
User <v> armed the system	R400	"CL"
User <v> armed the system	R401	"CL"
Automatic arm	R403	"CA"
User <v> armed remotely	R407	"CL"
Quick arm	R408	"CL"
Remote arm	R409	"CS"
User <v> armed to Stay mode	R441	"CG"
User <v> armed too early	R451	"CK"
User <v> disarmed too late	R452	"CJ"
User <v> Failed to Disarm	R454	"CI"
Partial Arm by user: <v>	R456	"CG"



System Event	CID Report Code	SIA Report Code
Recent disarm <v> user	R459	“CR”
Device enabled (501)	R501	"RG"
Device enabled (520)	R520	"RC"
Wireless sensor enabled in zone: <z> (552)	R552	"YK"
Zone <z> bypass cancelled	R570	"UU"
Zone <z> bypass cancelled	R571	"FU"
Zone <z> bypass cancelled	R572	"MU"
Zone <z> bypass cancelled	R573	"BU"
Group bypass by user: <v> cancelled	R574	"CF"
Zone <z> bypass cancelled	R576	"UU"
Zone <z> bypass cancelled	R577	"UU"
Vent zone bypass cancelled	R579	"UU"
Walk test deactivated by user <v>	R607	"TE"
Time/Date was reset by user <v>	R625	"JT"
System active (654)	R654	"CD"